

Cloud Speed Controller Programming Instructions For

Advance programmable Normal Aircraft/Boat ESC

50A/60A/70A/ /100A /200A (No BEC)

70A+UBC/100A+UBEC

Important Note: Some of these ESCs are **No BEC** to your Receiver. For those No BEC ESC, you need extra power source for your receiver. You can use a UBEC, a voltage regulator, or extra batteries as the power source for your receiver. If you hear the music tone repeat again and again for more than 3 times, you may need to check your power source to the receiver.

• Phrases 1 Enter programming Mode

1. Connect your motor and receiver to the speed controller, but do not connect the battery yet.
2. Turn on your transmitter and move the throttle stick to the full throttle position (full up). Please Note: Most Futaba transmitters have the throttle channel reversed by default.
3. Connect your battery and the controller will initialize with a musical tone.

• Phrases 2 Programming

After 3 seconds, the controller will start beeping a sequence of tones – a musical tone followed by one or more beeps. Each sequence represents a parameter that you can program and is repeated 3 times. The parameters are:

| | | |
|--------------|-------------------------|---------------------------------------|
| ♪— | Music Tone + 1 Beep | Options 1. Cell Type and No. of Cells |
| ♪— — | Music Tone + 2 Beeps | Options 2. Throttle Setting |
| ♪— — — | Music Tone + 3 Beeps | Options 3. Brake Setting |
| ♪— — — — | Music Tone + 4 Beeps | Options 4. Direction and Cutoff Type |
| ♪— — — — — | Music Tone + 5 Beeps | Options 5. Timing Mode |
| ♪— — — — — — | Music Tone + 6 Beeps | Option 6. PWM setting |

Step 1. Starting, Enter Sub-optins. When you hear the sequence for the parameter you wish to program, move the throttle stick to the **Center Position to Enter Sub-options**.

The controller will then **start beeping a Morse code sequence** of short and long beeps representing the possible options you may choose for the selected parameter. See table 2 for a list of all programmable options. Each option sequence is repeated 3 times.

Step 2. Select and save, then select the option, move the **throttle stick** back to the **Full-up-position.**, When you hear the sequence for the option you wish to select. The controller will then save the selected option, and **sound a long beep as a confirmation.** It then goes back to the beginning of the programming sequence (phrases 2).

Step 3. Complete programming and exit programming mode. Setup all the parameters you need to change. When complete, move the throttle stick to the **Lowest (Down) Position.** The controller will save all options and re-initialize in normal running mode so you can start your motor.

The table below summarizes the various programming options for each parameter:

| Option 1.1 Cell Type and Number of Cells ♪— | Only for 50A/60A/70A/ 100A-LV / 200A-LV 70A+UBEC 100A+UBEC (LV as 2S-7S) |
|---|---|
| • — 1 Short + 1 Long | NiMh/NiCD Auto Cell Count - 0.8V/Cell Cutoff Voltage * |
| • — — 1 Short + 2 Long | 7S Li-Po (25.9V) – 21V Cutoff Voltage |
| • — — — 1 Short + 3 Long | 6S Li-Po (22.2V) – 18V Cutoff Voltage |
| • — — — — 1 Short + 4 Long | 5S Li-Po (18.5V) – 15V Cutoff Voltage |
| • — — — — — 1 Short + 5 Long | 4S Li-Po (14.8V) – 12V Cutoff Voltage |
| • — — — — — — 1 Short + 6 Long | 3S Li-Po (11.1V) – 9V Cutoff Voltage |
| • — — — — — — — 1 Short + 7 Long | 2S Li-Po (7.4V) – 6V Cutoff Voltage |

| Option 1.2 Cell Type and Number of Cells ♪— | Only for 80A-HV/100A-HV (HV as 6S-10S) |
|---|--|
| • — 1 Short + 1 Long | NiMh/NiCD Auto Cell Count - 0.8V/Cell Cutoff Voltage * |
| • — — 1 Short + 2 Long | 10S Li-Po (37V) – 30V Cutoff Voltage |
| • — — — 1 Short + 3 Long | 9S Li-Po (33.3V) – 27V Cutoff Voltage |
| • — — — — 1 Short + 4 Long | 8S Li-Po (29.6V) – 24V Cutoff Voltage |
| • — — — — — 1 Short + 5 Long | 7S Li-Po (25.9V) – 21V Cutoff Voltage |
| • — — — — — — 1 Short + 6 Long | 6S Li-Po (22.2V) – 18V Cutoff Voltage |
| | |

| Option 1.4 Cell Type and Number of Cells ♪— | Only for 80A-12S/200A-12S (UHV as 8S-12S) |
|---|--|
| • — 1 Short + 1 Long | NiMh/NiCD Auto Cell Count - 0.8V/Cell Cutoff Voltage * |
| • — — 1 Short + 2 Long | 12S Li-Po (45.4V) – 39V Cutoff Voltage |
| • — — — 1 Short + 3 Long | 11S Li-Po (41.7V) – 33V Cutoff Voltage |
| • — — — — 1 Short + 4 Long | 10S Li-Po (37V) – 30V Cutoff Voltage |
| • — — — — — 1 Short + 5 Long | 9S Li-Po (33.3V) – 27V Cutoff Voltage |
| • — — — — — — 1 Short + 6 Long | 8S Li-Po (29.6V) – 24V Cutoff Voltage |

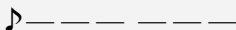
| Option 1.5 Cell Type and Number of Cells ♪ — | Only for 100A-SHV-15S / 200A-SHV-15S (SHV-15S LiPo) |
|--|--|
| • — 1 Short + 1 Long | NiMh/NiCD Auto Cell Count - 0.8V/Cell Cutoff Voltage * |
| • — — 1 Short + 2 Long | 15S Li-Po (45.4V) – 39V Cutoff Voltage |
| • — — — 1 Short + 3 Long | 14S Li-Po (41.7V) – 33V Cutoff Voltage |
| • — — — — 1 Short + 4 Long | 13S Li-Po (37V) – 30V Cutoff Voltage |
| • — — — — — 1 Short + 5 Long | 12S Li-Po (33.3V) – 27V Cutoff Voltage |
| • — — — — — — 1 Short + 6 Long | 11S Li-Po (29.6V) – 24V Cutoff Voltage |

| Option 2. Throttle Setting ♪ — — | |
|---|-----------------------|
| •• — 2 Short + 1 Long | Auto Throttle Range * |
| •• — — 2 Short + 2 Long | 1.1ms to 1.8ms |
| •• — — — 2 Short + 3 Long | Hard Acc* |
| •• — — — — 2 Short + 4 Long | Soft Acc |

| Option 3. Brake Setting ♪ — — — | |
|--|--------------|
| ••• — 3 Short + 1 Long | No Brake |
| ••• — — 3 Short + 2 Long | Soft Brake* |
| ••• — — — 3 Short + 3 Long | Medium Brake |
| ••• — — — — 3 Short + 4 Long | Hard Brake |

| Option 4. Direction and Cutoff Type ♪ — — — — | |
|---|---------------------------|
| •••• — 4 Short + 1 Long | Clockwise Rotation * |
| •••• — — 4 Short + 2 Long | Counterclockwise Rotation |
| •••• — — — 4 Short + 3 Long | Soft Cutoff |
| •••• — — — — 4 Short + 4 Long | Hard Cutoff * |

| Option 5. Timing Mode Setting ♪ — — — — — | |
|---|--|
| ••••• — 5 Short + 1 Long | 1° - For 2-4 Pole Inrunner Motors * |
| ••••• — — 5 Short + 2 Long | 7° - For 6-8 Pole Motors |
| ••••• — — — 5 Short + 3 Long | 15° - For 10-14 Pole Outrunner Motors |
| ••••• — — — — 5 Short + 4 Long | 30° - For 10-14 Pole High-RPM Outrunner Motors |

| | |
|---|---|
| Option 6. Pulse Width Modulation(PWM) Setting  | |
| — 6 Short + 1 Long 8KHz | – For low RPM and low pole count motors * |
| — — 6 Short + 2 Long 16KHz | – For most out runner motors |

* **Default Setting**